


1

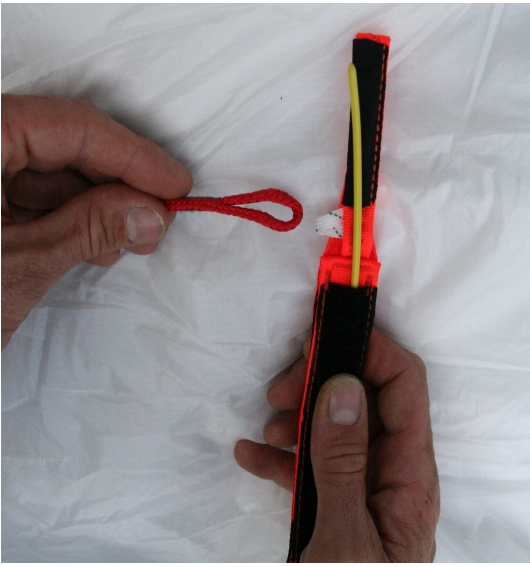


Remove the end of the yellow cable from the protective sleeve ...

2




... and pass the brake line through the toggle, entering from the side with the white loop ...

3

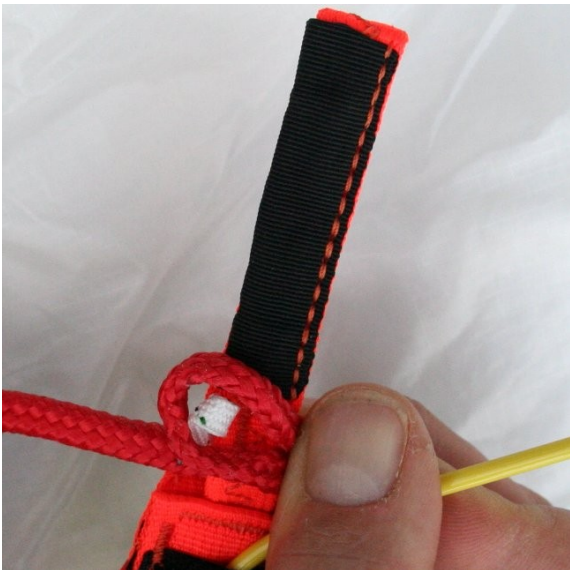

... thread the white loop through the loop on the end of the brake line...

4

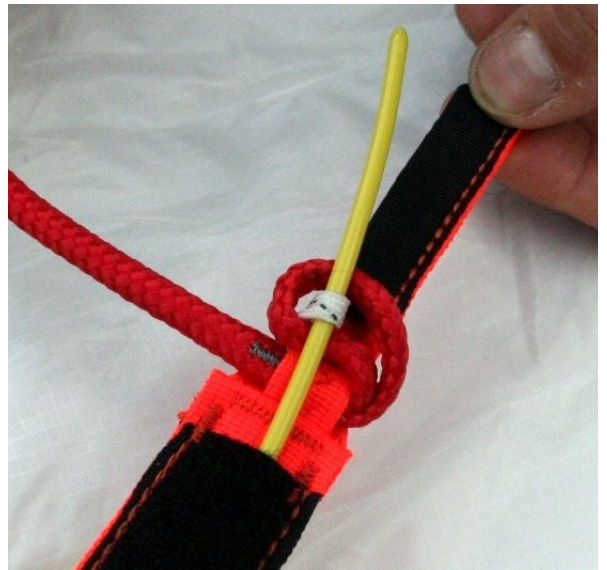

... and lock the system by passing the yellow cable through the white loop.

5



Insert the yellow cable inside the protective sleeve and pull on the brake line to place the system under tension.

6



The assembled toggle !